



TRUE WIRELESS EARPHONES

Instruction Manual
Catalogue Number: YP565/YP567

Introduction

Thank you for choosing the True Wireless Earphones. All devices brought to you are manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your True Wireless Earphones.

Remove all packaging material. You may wish to keep the packaging for future use or storage of your True Wireless Earphones. Alternatively, dispose of accordingly.

Index

DEVICE OVERVIEW	3
USING YOUR DEVICE	4
CARE AND MAINTENANCE	6
DEVICE SPECIFICATION	6
TROUBLESHOOTING	7
AFTER SALES SUPPORT	8
DEVICE GUARANTEE (UK ONLY)	8
DISPOSAL INFORMATION	8

In The Box




- Earbuds
- Silicone Ear Caps
- Charging Case
- Manual
- Micro USB Charging Cable

IMPORTANT SAFETY INFORMATION

- Avoid playing your earphone at high volume levels. Some studies have concluded that prolonged and extensive exposure to noise in excess of 95dB may impair hearing.
- Never wear your earphones while operating a motorized vehicle. It may create a traffic hazard.
- Exercise caution if you are wearing your earphones while engaged in activities such as walking, jogging, cycling etc. The distraction may cause an accident.
- Do not use the product in too high or too low temperature environment (Below -10 degree centigrade or Above 45 degree centigrade).
- Extreme temperatures can cause deformations, and will reduce the charging capacity of the device.
- Does not use in wet conditions, water can cause severe damage to the earphones.
- Do not use wet hands when operating equipment, equipment damage caused by water does not make the warranty scope.
- There are no user replaceable/repairable parts in this headset. Disassembling will void your warranty.
- Do not use around flammable gasses as fire or explosion may occur.
- Keep the device and packaging out of the reach of small children.
- When not in use, power the earphones off and store in the included charging case.

DEVICE OVERVIEW

- 1. Multi Function Button
- 2. Microphone
- 3. Ear Tip
- 4. Charging Case Latch
- 5. Micro USB Port

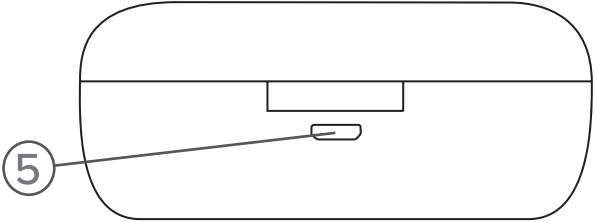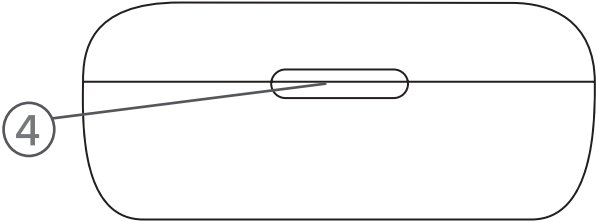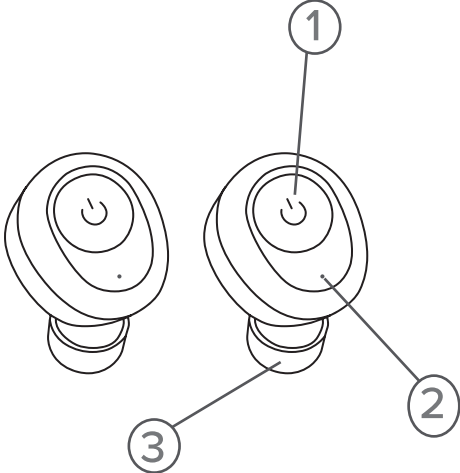

USING YOUR DEVICE

Multi-Function Button Actions (MFB)

1. Power On: Long Press MFB button around 1.5 seconds. At this point, the Red and blue indicator lights will flash respectively. The earphone will announce “Turn on” prompt tone through the earphone.
2. Power Off: Long Press MFB button around 3 seconds. At this point, the Red and blue indicator lights will flash respectively. The earphone will announce “Turn off” prompt tone through the earphone.
3. Pairing: Long press MFB button of L and R 1.5 seconds respectively, and then double-click on one of the headphones MFB button (to set to host). Once connected, the light will flash the blue and red lights at the same time.
4. Connect with Phone: Open Device “setting --- Bluetooth --- click “WC1811”. Once connected the indicator will turn blue and begin to flash. At this point the earphones will announce “Connected”.
5. Music play/pause: Press R or L MFB buttons to Play or pause music playing.
6. Answer Call: Press either MFB button when there is an incoming call.
7. Hang up Call: During a call, Press the MFB button to hang up.
8. Recent Call number redial: When the phone is connected to a Bluetooth headset, Double-click the MFB button.
9. Reject an incoming Call: Double-click the MFB button when call is incoming.
10. Cancel outgoing call: Short press the MFB button when in the dialing state.
11. Low Battery alarm: When the headset power is less than 20%, it will flash red for 5 seconds and earphone will announce “low charge prompt” 5 minutes afterwards.

12. Low battery shutdown: When the earphone is running on low battery, the earphone will automatically shut down. At this point, the red light will flash around the MFB button and the earphone will announce “powering off”.
13. Automatic Connection: When the earphones are connected successfully to the desired device, you will no longer need to repeat the step of pairing. Pairing will occur naturally when the earphones are turned on.

Restore Original Settings

To restore the earphones back to factory settings, long press the MFB buttons for 8 seconds. At this point two red and blue lights will flash.

One Earphone Use

One earphone can be paired directly to your device, without the use of the second.

1. Single open Pairing mode: Long Press the multi function button(1) on either the R or L earphone. After 1.5 seconds, the Red and blue lights will flash respectively. As with pairing 2 earphones together, the earphone will announce “turn on”.

Charging

To charge, put both the L and R earphones into the supplied charging case. Charging will begin when the lid is closed.

A red light will illuminate to indicate that the earphones are charging on the earphones. When fully charged, this red light will turn off.

There is also a power level indicator of the charge left in the charging dock.

To charge the dock, plug the included micro USB cable into the rear of the dock and then into a wall adaptor.

CARE AND MAINTENANCE

Clean the earphones with a soft damp cloth and let all parts dry completely after cleaning.

Do not use any aggressive cleaners, brushes with nylon bristles, sharp or metallic cleaning utensils, knives, hard scrapers and the like. They could damage the surfaces of the earphones.

Do not immerse the earphones in water and do not let water getting into the housing of the earphones.

DEVICE SPECIFICATION

Chip	RTL8763BF
Bluetooth Version	5.0
Sound	Stereo
Frequency Range	2.402-2.480 GHz
Support Protocol	HSP/HFP/A2DP/AVRCP
Bluetooth Range	10m
Sensitivity	98dB
Power	DC 5V/0.5~1.0A
Battery (Charging Dock)	3.7V Lithium Battery 500mAh
Battery (Earphones)	3.7V Lithium Battery 50mAh (x2)
Waterproof	IPX6
Charging Time (Charging Dock)	2.5 hours
Charging Time (Earphones)	1.5 hours
Working Time (Charging Dock)	Approx 4 full charges
Working Time (Earphones)	Approx 4.5 hours
Standby Time (Charging Dock)	Approx 300 hours
Standby Time (Earphones)	Approx 50 Hours

TROUBLESHOOTING

Common Problems	Solutions
Secondary earbud signal is disconnected during the call.	After hanging up the phone, put the secondary earbuds into the charging box and reconnect them automatically.
Primary and secondary earbuds cannot be paired automatically.	Long press the primary and secondary earbuds for 20 seconds, re-pair after clearing the record.
There is a delay in the secondary earbuds, 2 earbuds sound, the sound is not synchronised, there is a delay of about 20 seconds. In this case, the sub-earbuds are easy to get stuck in the middle of listening to songs.	Turn off and on again.
Occasionally, the signal is broken frequently and returns to normal after a few minutes.	If it does not return to normal, turn off and on again.
If there are other abnormalities in use.	Put the earbuds back in the charging case to reset, if not, press and hold the main and secondary earbuds for 20 seconds.

AFTER SALES SUPPORT

If you need help using your device, please contact Giani Ltd:-

- Telephone: 0161 480 6204.
- Email: info@gianiuk.co.uk.
- Website: www.gianiuk.co.uk.
(Replacement instruction manuals are available to download from the website).

DEVICE GUARANTEE (UK ONLY)

If your appliance ceases to function within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it
- It has not been modified (except by Giani Ltd)
- It was not purchased second hand
- It has not been used commercially
- You have not fitted a plug incorrectly
- You can supply proof of purchase, indicating the price you paid and where and when the appliance was purchased.

This guarantee does not affect your statutory rights.

DISPOSAL INFORMATION

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU

At the end of its working life, the appliance must NOT be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the device is marked with a crossed-out wheeled dustbin.

Are you having problems with your device?

Before returning this item to your place of purchase
Please contact Giani at:

Email - info@gianiuk.co.uk

Website - www.gianiuk.co.uk

J.D.Williams L.T.D
Manchester - M60 6ES



M606ES01

