



KMO38LHG-AEE 20022019



38L Mini Oven

Instruction Manual

Model Reference: GC-KMO38LHG-AEE/ Cat Number: 71418091

INTRODUCTION

Congratulations on choosing to buy a Cucina product. All products brought to you by Cucina are manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your Mini Oven. We hope you enjoy using your purchase for many years to come.

Remove all packaging material. You may wish to keep the packaging for future use or storage of your Mini Oven, alternatively, dispose of accordingly.



CONTENTS

INTRODUCTION	03
IMPORTANT SAFETY INFORMATION	05
BEFORE FIRST USE	07
PRODUCT OVERVIEW	08
USING YOUR PRODUCT	09
CLEANING.....	12
SPECIFICATION	13
AFTER SALES SUPPORT	13
DISPOSAL INFORMATION.....	13

IMPORTANT SAFETY INFORMATION

 
- Read all instructions.
- Do not touch hot surfaces with hands. Use handle or hand protection.
- To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
- When operating the oven, keep at least 12 cm of space on all sides of the oven to allow for adequate air circulation.
- Unplug from outlet when not in use, or before cleaning. Let it to cool down before putting on or taking off parts, or before cleaning.
- Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
- Extreme caution should be exercised when removing tray or disposing of hot grease or other hot liquids.
- Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts, and endanger a risk of electric shock.
- A fire may occur if the oven is covered by or placed near the flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
- Extreme caution should be exercised when using containers constructed if anything other than metal or glass.

- Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- To disconnect, turn any control to "off", then remove plug from wall outlet. Always hold the plug, but never pull the cord.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
- This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Avoid scratching door surface or nicking edges. If the door glass has a scratch or nick, contact the nearest Authorized Service Center for examination and repair.
- Do not use appliance for other than intended use.
- This appliance is for HOUSEHOLD USE ONLY.
- The accessible surfaces are liable to get hot when the appliance is operating.
- Glass Door cannot support goods in the fully open position.
- The appliance is not intended to be controlled by an external timer or separate remote-control system.
- Caution, hot surface! The temperature of accessible surface may be high when the appliance is operation. Do not touch hot surfaces. Use handle or knobs.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- The door or the outer surface may get hot when the appliance is operating.

BEFORE FIRST USE:


- Read all instructions included in this manual.
- Make sure oven is unplugged and Timer Knob is in the off position.
- Remove all racks and pans. Wash the racks and pans in hot sudsy water or in dishwasher.
- Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new cooker with Rotisserie and Grill.
- After re-assembling your oven, we recommend that you run it at MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping.

PRODUCT OVERVIEW

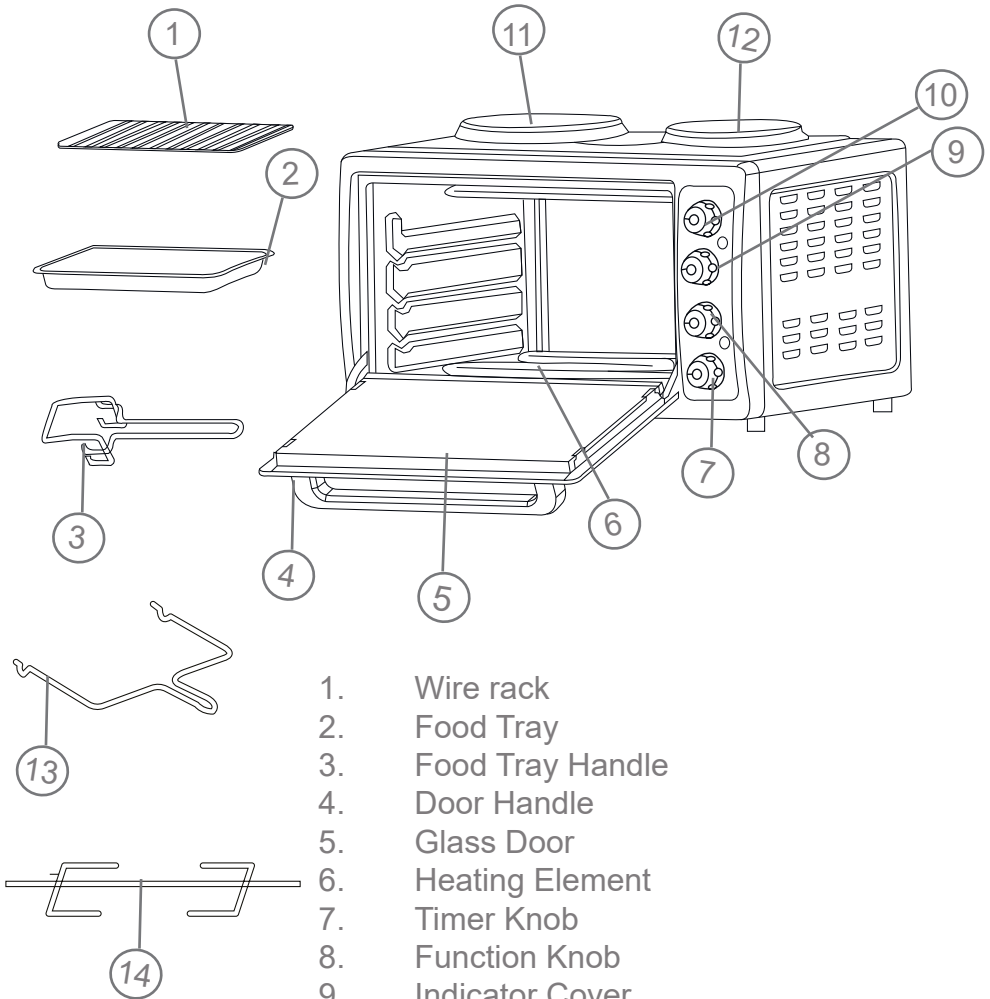

1. Wire rack
2. Food Tray
3. Food Tray Handle
4. Door Handle
5. Glass Door
6. Heating Element
7. Timer Knob
8. Function Knob
9. Indicator Cover
10. Temperature Knob
11. Large Hob
12. Small Hob
13. Rotisserie Handle
14. Rotisserie Fork

 PRODUCT OVERVIEW

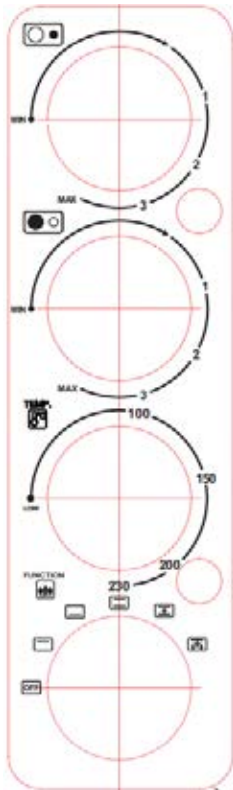

Large hob temperature knob

Small hob temperature knob


Temperature knob: the temperature choice is from 90°C to 230°C. You could select desired temperature according to the practical situation.

Function Knob: select working modes.

 : Upper heating

 : Lower heating

 : Upper heating + Lower heating

 : Upper heating + Lower heating + Convection

 : Upper heating + Convection + Rotisserie

USING YOUR PRODUCT

When using the oven for the first time:

- Confirm the marked power consumption is suitable for your home.
- Do not let cord hang over edge of table or counter to avoid that children may stumble over.

- If the supply cord is damaged, the oven should not be used before it is repaired.
- Oven should be sent to the manufacturer, authorized service agent or a similarly qualified person to repair in order to avoid a hazard.
- This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:
 - 1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - 2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or table top where they can be pulled on by children or tripped over accidentally.

Using Your Oven:

1. Place the food on grill rack, Food tray or Rotisserie Fork and close the oven door.
 - Do not use any paper or plastic container.
 - Use Food tray for any food that is small in size or likely to drip while cooking.
 - Place the food evenly on the grill rack.
2. Insert the power plug into the socket. The Timer Knob must turn OFF.
3. Set the cooking time and desired temperature, and function.

NOTE: To change the function to either hob, oven or rotisserie use the function Knob.

NOTE: When Rotisserie function is selected, the fork will begin to turn inside the oven. Please make sure fork is placed inside oven before selecting the function.

4. When cooking time ends up, you will hear a beep, then you should:
 - Use accessory handle or oven mitts to remove hot food to avoid any scald.
 - In case to cease the cooking process during the middle of the cooking, make sure to turn the time knob to “OFF” position.
 - Remove the power plug from the socket after cooking.

Oven cooking guide:

1. Cooking time may varies depend on food ingredients, temperature, mass and portion. Please adjust the time with the recipe time reference and according to the actual cooking condition.
2. If prolong cooking, cooking time may be lessen with the hot heating elements. Adjust the time based on the actual food condition.
3. The oven will adjust the heating elements temperature automatically to avoid overheat. It will come off eventually but do not remove the food from the oven to ensure proper cooking effect.

NOTE: The weight of the food which is put on the Food Tray/Wire Rack cannot be over 3.5kg. The food cannot be placed on just one side of the rack, it is best to distribute food evenly across the Food Tray/Wire Rack.

CLEANING

When cleaning the appliance, you should pay attention to the following points:

- Remove plug from the mains socket, and allow the appliance to cool down before cleaning it.
- Do not immerse the motor section of the appliance in water and make sure no water enters the appliance.
- Clean the motor section by wiping it with a damp cloth. A little detergent can be added if the appliance is heavily soiled.
- Your oven features a quick-clean coating. Do not use scouring pads, steel wool or any form of strong solvents or abrasive cleaning agents to clean the appliance, as they may damage the surfaces of the appliance.
- Take the appliance apart and clean all of the accessories separately. All of the accessories separately can be cleaned in warm water.

IMPORTANT! Allow to dry fully after cleaning before using again. Do not use the appliance if damp.

- We recommend you lubricate the meat screens with vegetable oil after cleaning, and store them in grease-proof paper to minimise the risk of rust and discolouration.
- After washing and drying, immediately place attachment into the protective sleeve for storage.

SPECIFICATION

Capacity	38L
Power	220V-240V ~50HZ
Oven Output	1500W
Large Hob Output	1000W
Small Hob Output	600W

AFTER SALES SUPPORT

If you need help using your product, please contact Giani Ltd:-

- Telephone: 0161 480 6204.
- Email: info@gianiuk.co.uk.
- Website: www.gianiuk.co.uk.

(Replacement instruction manuals are available to download from the website).

DISPOSAL INFORMATION

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must NOT be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household product separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As a reminder of the need to dispose of household products separately, the product is marked with a crossed-out wheeled dustbin.



BY GIANI



JA1731XQ



2011/65/EU